



User Instructions

VISAGE

REMOTE CHASER


Thank you for purchasing the VISAGE by Elation®. For your convenience this product has been tested and is ready to be used. There is no assembly required. Please read the following instructions before installing or using your new unit.

Product Description

The VISAGE Remote Chaser features 16 built-in chasing patterns with Audio/Chase modes and Four AC-120V, 3-prong UL sockets for channel output. In AUDIO mode, the patterns are executed with the music rhythms detected by the internal microphone. In CHASE mode, the chasing speed can be adjusted. A wireless remote controller is provided for full control capabilities.

General Functions (Front)

1. POWER OUTPUT: Four 3-prong UL socket, 5A/CH., 15A MAX.
2. SPEED UP BUTTON: Press to increase the chasing speed.
3. SPEED DOWN BUTTON: Press to decrease the chasing speed.
4. PATTERN UP SELECT: Select desired chasing pattern by pressing to increase by one.
5. PATTERN DOWN SELECT: Select desired chasing pattern by pressing to decrease by one.
6. AUDIO/CHASE SELECT & INDICATOR: Press to select chasing mode from AUDIO/CHASE.
7. FULL ON BUTTON: Press to make all channels at full intensity.
8. STAND BY: Press to pause all channels.
9. BUILT-IN MICROPHONE: Used to detect AUDIO signal.
10. CHANNEL INDICATOR: Lights when appropriate channel is turned on.

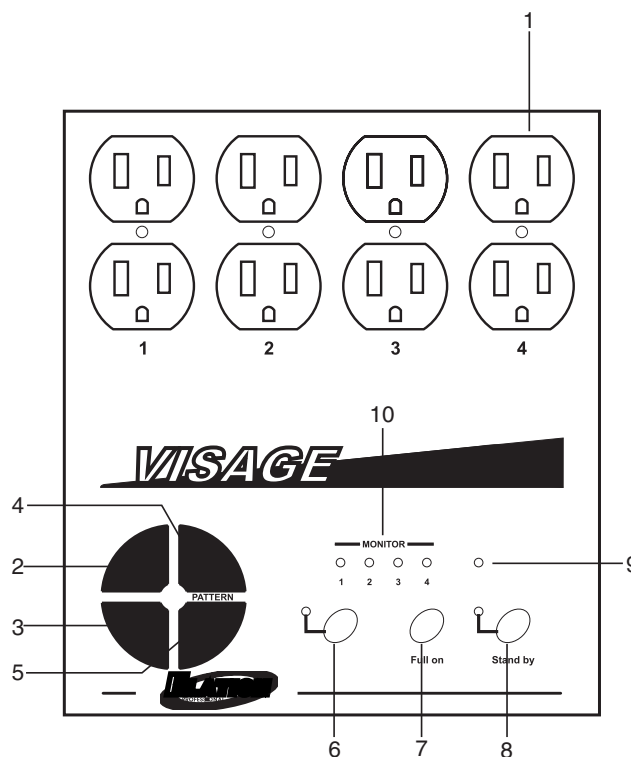

Technical Specifications:

Model - VISAGE

Dimensions: 7.75" x 6.5" x 2.75"

Weight: 4 lbs.

Output load: 5A per channel or 15A MAX.
(600W per channel)

Power: 120V 50-60Hz


For service, contact Elation Professional®.

Caution! Always disconnect from main power before servicing. There may be high voltage running through console. Remember to always replace with same type fuses.




General Functions (Rear)

11. POWER SWITCH: Press to turn the power ON or OFF.
12. CHANNEL FUSE: 6. 3A 250V
13. POWER INPUT: AC 120V - 50/60Hz
14. INFRARED SENSOR
15. INFRARED RECEIVING SENSOR SOCKET: Plug in remote infrared detector for remote control.
16. LINK IN: This will receive data from another units 'LINK OUT'.
17. LINK OUT: This will send data to another unit.

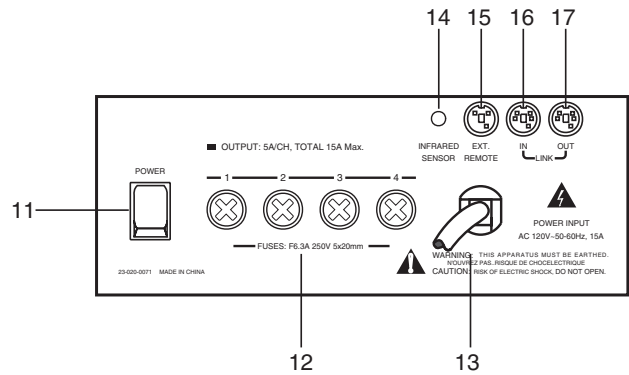

Remote Controller Controls & Functions

1. **Speed** \uparrow / \downarrow **Buttons:** Press to increase or decrease the chasing patterns' speed.
2. **Audio/Chase Button:** Press to engage chase to sound mode. The red LED will indicated sound active mode.
3. **Stand By Button:** This functions as a 'Blackout' feature (*All channel turn off*). A yellow LED will indicate Stand By mode.
4. **Full On Button:** This will activate full on mode (*All channels on full*).
5. **Pattern** \uparrow / \downarrow **Buttons:** Press to select one (1) of 16 built in programs.

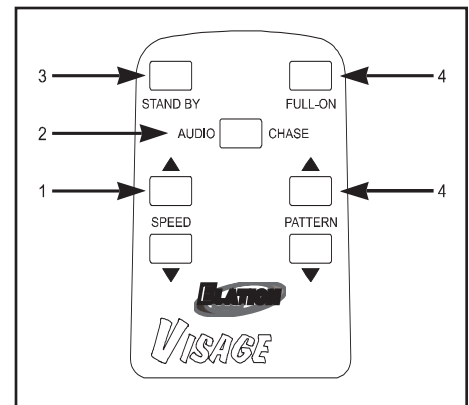

Technical Specifications:

Model - Visage Remote

Voltage: 2 AA 1.5v Alkaline Battery

Fuse: None

Dimensions: 5" x 1.75" x .75"

Weight: 1 lbs.

Range: Approx. 30ft.

BATTERY WARNING!: Remove the batteries when the remote will not be in use for a long period of time. Never mix old and new batteries or batteries of different type. Always load the batteries with the correct polarity.

CAUTION!: Direct sun light may impede the infrared operation of the remote.

Operating Instructions

1. Connect lamps or groups of lamps to any or all the UL 3-prong sockets on the unit. Each outlet can handle a maximum of 5 amps. The pack can handle 15 amps maximum.
2. Turn the units' power on.
3. Adjust the chase speed by selecting the **SPEED** \uparrow and \downarrow .
4. Select your chase pattern by selecting the **PATTERN** \uparrow and \downarrow .
5. All adjustments can also be made by the remote control.
6. To chase to sound, press the **AUDIO/CHASE BUTTON**.
7. When mounting this chaser in an area that may obstruct the remote controls infrared path an optional external remote infrared detector can be used and mounted in an area that will give the user a clean shot from the remote control.