



SC-816



User Instructions

©Elation Professional®

4295 Charter Street
Los Angeles Ca. 90058

www.elationlighting.com

SC-816™

Introduction

Unpacking: Thank you for purchasing the SC-816™ by Elation Professional®. Every SC-816™ has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for any damage and be sure all accessories necessary to operate the unit have arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please do not return this unit to your dealer without first contacting customer support.

Introduction: The SC-816™ is a 8 channel lighting control system. The SC-16F controller can control the SC-RP8 power pack via cable or LC Wireless(sold seperately). The SC-RP8 has 8 channels for output and a circuit breaker for circuit protection. This controller features the Pattern and Stand By buttons for use of the T16F. This unit also provides strobe speed control and fog machine control.

Customer Support: Elation Professional® provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.elationlighting.com for any comments or suggestions. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (323) 582-3322
Fax: (323) 582-2610
E-mail: support@elationlighting.com

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact Elation Professional at the toll free number.

At Elation Professional® we are concerned about the environment, and package all our units in recyclable material. Please do not dispose of the shipping carton in the trash, recycle whenever possible.

SC-816™**Safety Precautions**

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product outdoors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 7 for cleaning details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the appliance.
 - C. The appliance has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

SC-816™**Features**

- LC Wireless Compatible (sold separately)
- Easy Set-Up
- Works with Existing Hardware
- LED Power Indicator

SC-816™**Product Registration**

The SC-816™ carries a one year limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain a R.A. number by contacting our customer support team on our customer support number. All packages returned to the service department not displaying a R.A. number on the outside of the package will be returned to the shipper.

SC-816™**General Instructions**

To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operations of this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

Power Supply:

The SC-16F controller can receive its operating power from the SC-RP8 power pack when the SC-RP8 is plugged in to a wall outlet.

Set Up:


The SC-16F controller is linked to the SC-RP8 via the included 9-pin com cable. It can also be linked via the LC Wireless controller (sold separately).

1. Connect the supplied 9-pin com cable from the output of the SC-16F to the input of the SC-RP8. **Note: The LC Wireless can also be used in the connection, instead of the 9-pin com cable. The LC Wireless is sold separately.**
2. When using the provided 9-pin com cable, only plug the SC-RP8 power pack into a standard AC outlet. The SC-16F controller will receive its operating power from the plugged in SC-RP8 power pack.
When using the LC Wireless (sold separately), both the SC-16F controller and the SC-RP8 power pack must be plugged into a standard AC outlet. The power supply that will be used by the SC-16F controller is provided with the LC Wireless
3. If desired, connect the 3-pin female XLR port of the SC-16F to the 3-pin male XLR port of a T16F.

After setting up the SC-816 system, basic operation is very simple.

1. Be sure the main power is off on both units, and connect your desired lighting effects to the power relay pack.
Notice: There are eight sockets corresponding to the 8 channels on the controller.
2. Once you have connected your desired effects to the power pack, you can use the Latch buttons to turn the fixtures on or off. Or, use the Flash buttons to momentarily turn the fixtures on and off.


3. You can also use the Pattern and Stand By buttons to select chase patterns or scenes. The SC-16F controller must be connected with T16F for this function. Pressing the Stand By button for three seconds can activate 17 chase patterns or 7 fixed scenes. When chase patterns are activated, each tap of the Pattern button will select a chase.

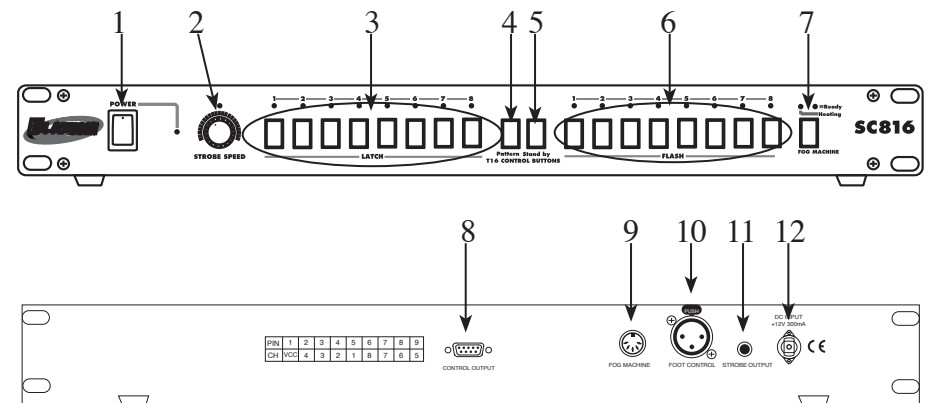

1. **Power Switch** - This switch turns the power on/off. When the blue LED is lit, the power is on.
2. **Strobe Speed** - Turning this knob allows you to adjust the speed of the strobe. To increase the speed, turn the knob clockwise. Turning the knob counter-clockwise will decrease the speed till the strobe function “clicks” off.
3. **Latch Buttons** - Pressing the desired button allows you turn the corresponding channel on. This will be indicated by a lit LED above the Latch and Flash channel button. Pressing the button will turn that channel off. Thus, turning the lit LED above the Latch and Flash buttons off.
4. **Pattern Button** - This button is used with the T16F. In master mode of the T16F, pressing this button can select the chase pattern or scene. To utilize these functions, please

connect the T16F correctly via the 3-pin female DMX connector. For more details, refer to the T16F user instructions.

5. **Stand By Button** - This button is used with the T16F. In master mode of the T16F, pressing this button can activate 17 chase pattern or 7 fixed scenes. To utilize these functions, please connect the T16F correctly via the 3-pin female DMX connector. For more details, refer to the T16F user instructions.
6. **Flash Button** - Pressing and holding the desired buttons will allow you to turn on the corresponding channels temporarily. This will be indicated by the lit LEDs above the Latch and Flash buttons. Releasing the desired buttons will turn off the channels.
7. **Fog Machine Button** - This button can be a trigger for controlling a fog machine. For compatible fog machines see Fog Machine Connector (9).
8. **Control Output** - Using the included 9-pin com cable or LC Wireless, connect the SC-16F controller to the SC-RP8 power pack. When using the cable for connection, up to three power packs can be controlled by this unit.
9. **Fog Machine Connector** - Connects to a fog machine using a 5-pin cable. Compatible fog machines include the Vaporizer™, Vapor Flow™, Fog Storm 1200™ and 1700™.
10. **Foot Control Connector** - Connection for the use of the T16F.
11. **Strobe Output** - 1/4" mono jack for output to strobes.
12. **DC Input** - Connection for a power supply. This DC input is used when the LC Wireless is being used. The power supply is included with the LC Wireless

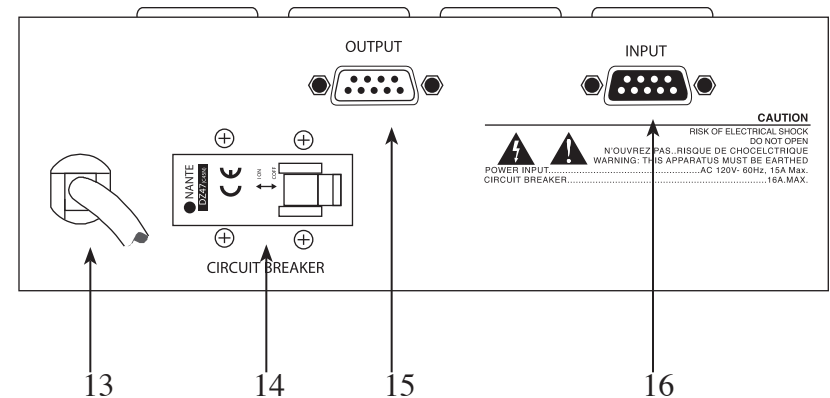

13. **AC Input** - Connects to a standard AC outlet.
14. **Circuit Breaker** - Protects against the risk of electrical shock or fire and protect the circuitry. In the case of an internal short or power surge.
15. **9-Pin Output Connection** - This connection is used to link up other power packs. Up to three power packs can be controlled by this unit.
16. **9-Pin Input Connection** - Using the included 9-pin com cable or LC Wireless, connect the SC-16F controller to the SC-RP8 power pack. When using the cable for connection, up to three power packs can be controlled by this unit. Also, when using the cable for connection the SC-16F controller can receive its operating power from the plugged in SC-RP8 power pack.

ONE YEAR LIMITED WARRANTY

A. Elation Professional® hereby warrants, to the original purchaser, Elation Professional® products to be free of manufacturing defects in material and workmanship for a period of 1 Year (365 days) from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the Elation Professional® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which Elation Professional® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional® factory unless prior written authorization was issued to purchaser by Elation Professional®; if the product is damaged because not properly maintained as set forth in the User Manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, Elation Professional® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. Elation Professional® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to Elation Professional® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

©Elation Professional Supply® - www.elationlighting.com - SC-816™ User Manual Page 9

Model:	SC-816™ (Controller)
Voltage:	DC 12v 300mA
Input:	1/4" mono jack 3-pin female XLR 9-pin female sub "D" connector 5-pin multi-connector
Dimensions:	482 x 70 x 42 mm
Weight:	2.4 Lbs. / 1.12 Kgs.
Warranty:	1 Year (365 days)
Accessory:	LC Wireless
Model:	SC-8C™ (Power Pack)
Voltage:	AC 120V ~ 60Hz 15A Max.
Circuit Breaker:	16A
Input:	9-pin male sub "D" connector 9-pin female sub "D" connector
Output:	5A/Channel, Total 15A
Dimension:	260 x 193 x 73mm
Weight:	6.2 Lbs. / 2.85 Kgs.

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.