

ADJ SCENE SETTER 48 QUICK REFERENCE GUIDE

CATEGORY	FUNCTION	OPERATION METHOD
Recording	Record Enable	Hold "RECORD" and key in record code on Preset A & B
	Erase All Programs	Hold "RECORD" and key in "1", "4", "2", "3" on Preset A
	Record Disable	Hold "RECORD" and press "EXIT"
	Clear Memory	Hold "RECORD" and press "REC CLEAR"
	Record Step	Set Scene, then hold "RECORD"
	Record Chase	Set Scene, then press "RECORD." Repeat for each step in the chase.
	Assign to Fader	Hold "RECORD" and press "SCENE"
	Record Chase Speed	Set Speed Fader at "Show," then hold "REC SPEED" and press "SCENE"
	Edit Channel Levels	Turn on Edit Mode, then hold "UP" or "DOWN" and press "CHANNEL"
	Add Step	<ol style="list-style-type: none"> 1. Turn on Edit Mode 2. Record New Step 3. Select step by pressing "STEP" to scroll through the steps in order until you reach the location where you want to insert the new step 4. Press "INSERT"
	Delete Step	<ol style="list-style-type: none"> 1. Turn on Edit Mode 2. Press "STEP" to scroll through the steps in order until you find the step you wish to delete 3. Press "DELETE"
	Quit Exit	Hold "RECORD" and press "EXIT"
	Factory Record Code	Hold "RECORD" then press "1" "6" "6" "8"
Play Back	Preset Mode	Press "MODE SELECT"
	Double Preset	Set Scene, Master A & B Up/Down
	Single Preset Park	Set Scene, press "PARK", move Masters down
	Flash Add/Kill	Press "ADD/KILL" (Off = ADD, On = KILL)
	Manual Scene	Fade at Instant, Scene Up/Down
	Fade Scene	Set Fade time, Scene Up/Down
	Select Chase	Chase Fader up
	Manual Chase	Speed at Show, press "STEP" to chase through scenes
	Fade Chase	Select Chase, Set Speed, Fade
	Audio Chase	Press "AUDIO": On = AUDIO, Off = CHASE
	Blind Channel	Hold "BLIND" and press "CHANNEL"
	Home Channel	Hold "HOME" and press "CHANNEL"
	Hold Scene	Press "HOLD"
	Dead Blackout	Press "DARK"
	Display % or 0-255	Hold "RECORD" and press "% OR 0-255"
	Call Pre-Set Program	Hold "RECORD" and press "FLASH 6", "FLASH 6", "FLASH 8", "FLASH 8"
	CONTINUED ON NEXT PAGE	

ADJ SCENE SETTER 48 QUICK REFERENCE GUIDE

CATEGORY	FUNCTION	OPERATION METHOD
Setup	MIDI In Ch. Setup	Hold "RECORD" and press "1FLASH", "1FLASH", "1FLASH"
	MIDI Out Ch. Setup	Hold "RECORD" and press "2FLASH", "2FLASH", "2FLASH"
	MIDI Exclusive Input	Hold "RECORD" and press "3FLASH", "3FLASH", "3FLASH"
	MIDI Exclusive Output	Hold "RECORD" and press "4FLASH", "4FLASH", "4FLASH"
	Max Speed Setup, 5 minutes	Hold "RECORD" and press "5FLASH", "5FLASH", "5FLASH"
	Max Speed Setup, 10 minutes	Hold "RECORD" and press "10FLASH", "10FLASH", "10FLASH"
	Quit MIDI In Ch. Setup	Hold "RECORD" and press "EXIT"
	Quit MIDI Out Ch. Setup	Hold "RECORD" and press "EXIT"
	DMX Ch. Assignment	1. Hold "RECORD" and press "FLASH8", "FLASH8", "FLASH8" 2. Press "UP" or "DOWN" for DMX Ch.
	DMX Ch. Reset	Hold "RECORD" and press "FLASH7", "FLASH7", "FLASH7"
Change Record Code	Change Record Code	<ol style="list-style-type: none"> 1. Record enable: Hold "RECORD" button, then press "FLASH1", "FLASH6", "FLASH6", "FLASH8" 2. Hold "RECORD" and "EDIT" then enter a new 4-digit record code using the Flash buttons 3. Enter the new record code a second time to confirm 4. To cancel the new code, hold "RECORD" and "EXIT"