

ASSEMBLY INSTRUCTION

ATTACHMENT OF OPTIC ARMS TO HOUSING

1. HANG THE STREAMER IN A SECURE LOCATION.
2. REMOVE BASE COVER FROM STREAMER (11 SCREWS IN TOTAL).
3. THE BASE COVER IS SPLIT INTO 4 PARTS AS FOLLOWS (SEE FIGURE 1).

NOTE: PART 1 AND PART 2 ARE OPPOSITE.
PART 3 AND PART 4 ARE OPPOSITE.

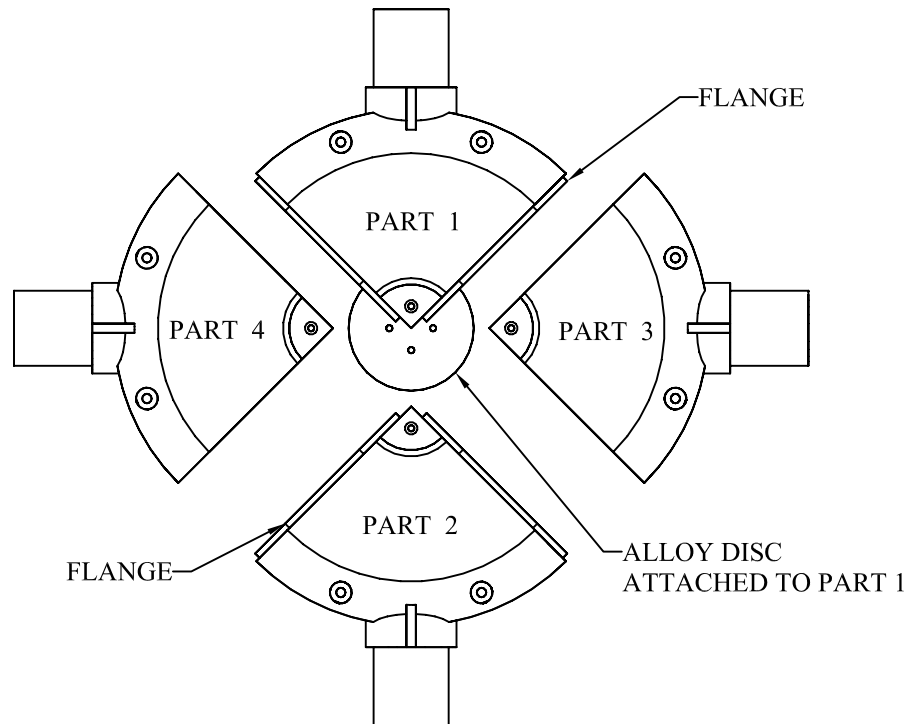


FIGURE 1

ATTACHMENT OF FIRST OPTIC ARM.

1. SLOT FIRST OPTIC ARM INTO HOUSING POSTION. ATTACH PART 1 OF BASE COVER THEN SLIDE PLASTIC SLEEVE FROM OPTIC ARM TO LOCK OPTIC ARM AND BASE COVER TO THE HOUSING (SEE FIGURE 2).

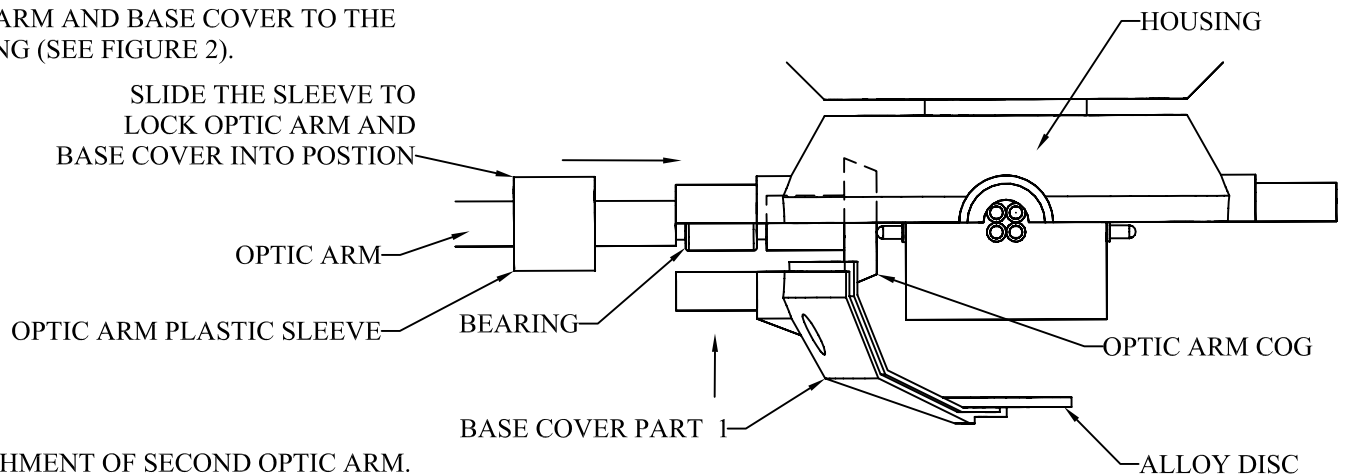


FIGURE 2

ATTACHMENT OF SECOND OPTIC ARM.

1. SLOT SECOND OPTIC ARM INTO HOUSING POSTION. ATTACH PART 2 OF BASE COVER THEN SLIDE PLASTIC SLEEVE FROM OPTIC ARM TO LOCK OPTIC ARM AND BASE COVER TO THE HOUSING (SEE FIGURE 3).
2. REPEAT PROCESS USING PART 3 BASE COVER FOR THIRD OPTIC ARM AND PART 4 BASE COVER FOR FOURTH OPTIC ARM.
3. LASTLY INSERT ALL 11 SCREWS AND TIGHTEN SECURELY, ENSURE ALL OPTIC ARM PLASTIC SLEEVES ARE LOCKED INTO POSITION

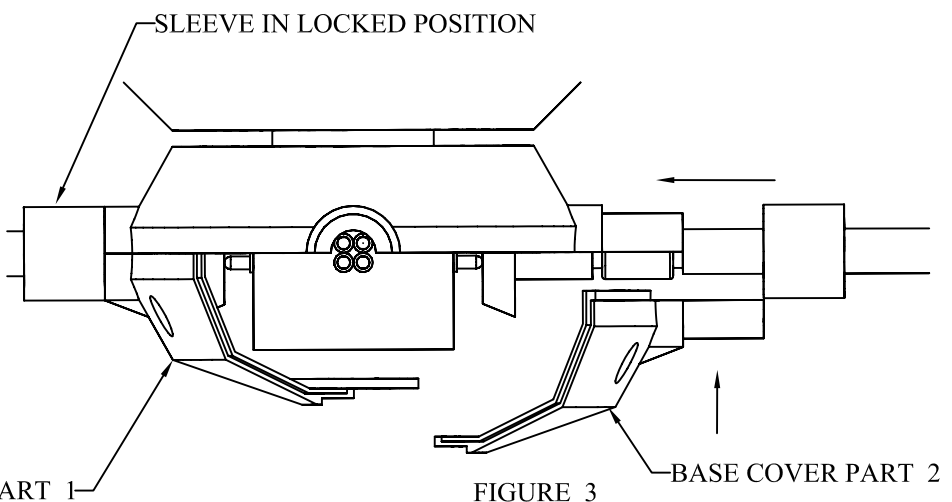


FIGURE 3